



## **M01 Mini FM Transmitter**


# **User's Manual**

## Introduction

It has pickup-receiver which can collect sound nearby.

This is the battery connecting part.

The longest wire is used as antenna.

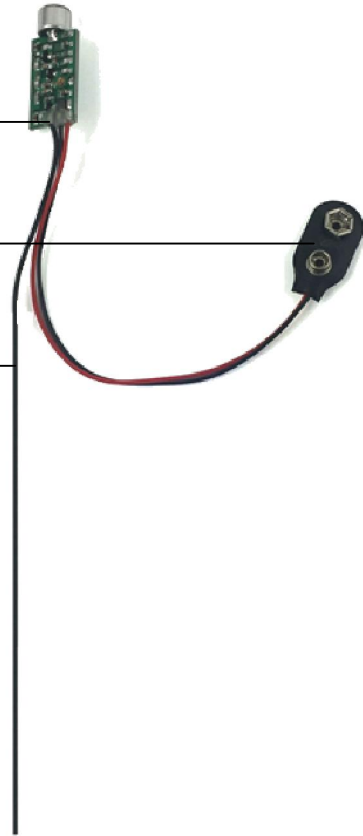


## Step1

Connect the 9V battery on the transmitter.

Battery: 9V, Current: 10mah.

The transmitting frequency will be affected by the battery voltage, when voltage changes, the transmitting frequency might deviate a little.

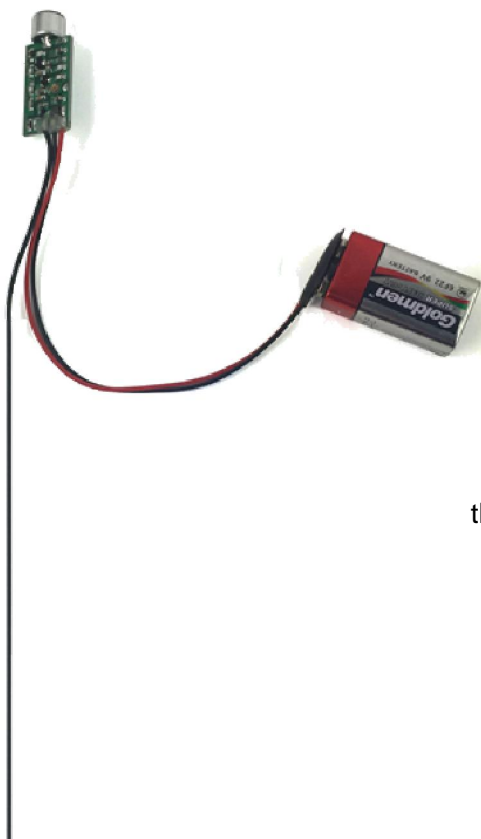


## Step2

Keep the antenna(longest wire) straight during use.

Keep the transmitter far away from metal objects or structure to reduce the affects in broadcasting efficiency.

Keep the transmitter higher from ground to get farther distance.

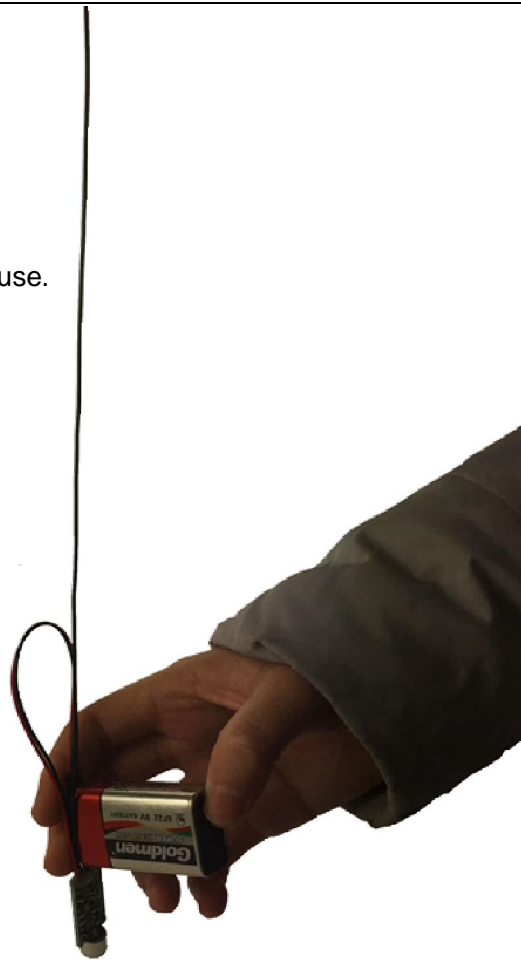

## Step3

Please turn on your FM receiver and adjust to The same frequency(about 100.00MHZ) as M01.

Please make sure the transmitter and receiver should be away from each other at least 10 meters.

The transmitting distance depends much on the environment. Using in an open area and a higher position is highly recommended for longer distance and better receive effect.



If you have any problem or suggestion about this product(M01), Please send email to



FMUSER INTERNATIONAL GROUP INC.

Add: Room1603, HuiLanGe, No.273 HuangPu Road West, TianHe District.,

GuangZhou, Guangdong, China, 510620

Tel: +86-20-87597795

Fax: +86-20-87588285 transfer 803

Support Email: [support.fmuser@cantonmade.com](mailto:support.fmuser@cantonmade.com)

Official Website: [a.fmuser.com](http://a.fmuser.com)

If you have any problem or suggestion about this product(M01), Please send email to [support@cantonmade.com](mailto:support@cantonmade.com)